

Quick Reference Instructions

WPM 2006 plus
WPM 2006 R
WPM 2007 plus
WPM 2007 R

1. Key assignment

The heat pump manager is operated using 6 keys:

 **Modus** Briefly touch

Change the operating mode by pushing the key once or repeatedly:
The filled square in the upper right corner of the display indicates the current operating mode.

Symbol	Operating mode	Denotation
	Auto	Fully automatic control of the entire heat pump heating system
	Vacation	Temperature lowering and hot water block for an adjustable time period (in days)
	Party	For overriding programmed temperature lowering for an adjustable time period (in hours)
	Heat generator 2	Heat pump blocking; Heating and domestic hot water preparation through the second heat source (e.g. oil heater) or the electric heating elements
	Summer	Domestic hot water and swimming pool water preparation; Heating operation blocked
	Cooling	Cooling operation cannot be activated on all heat pumps

When the key is pressed, the selected operating mode will be shown as text in the display.
The selected operating mode will be activated after approx. 10 seconds.

 **Menu** Keep pressed for 2 seconds

Jump to the menu to modify *Settings*.

 **ESC** Briefly touch

Jump back to a higher menu level.

Keep pressed for 3 seconds

Jump back to the standard display.

Keep pressed for 5 seconds

Activate and deactivate the keylock.

 Briefly touch

Confirm changes to settings (Enter key).

 Briefly touch

Press the key once to increase the heating temperature by 1 °C.
The indicator bar will move to the right.

 Briefly touch

Press the key once to reduce the heating temperature by 1 °C.
The indicator bar will move to the left.

2. Settings menus

How to adapt the settings to your requirements:

 **Menu** Keep pressed for 2 seconds

Jump to the menu to modify *Settings*.

 Briefly touch

Confirm the menu item *Settings* to go to the submenus.

 Briefly touch

Jump to other setting options.

 **ESC** Keep pressed for 1 second

Jump back to a higher menu level.

Note: These quick reference instructions do not replace the enclosed operating instructions, which can also be downloaded from the Internet.

Quick Reference Instructions

WPM 2006 plus
WPM 2006 R
WPM 2007 plus
WPM 2007 R

3. Domestic hot water preparation

How to set the domestic hot water temperature and the hot water block:

	Keep pressed for 2 seconds	Jump to the menu to modify <i>Settings</i> .
	Briefly touch	Confirm the selection of the menu item <i>Settings</i> .
	Briefly touch	Press the key several times to select the menu item <i>Domestic hot water</i> .
	Briefly touch	Confirm selection of the menu item <i>Domestic hot water</i> .
	Briefly touch	Confirm selection of the menu item <i>Hot water set temp.</i>
	Briefly touch	Increase or lower the hot water set temperature as required.
	Briefly touch	Confirm the set value.
	Briefly touch	Select the menu item <i>Hot water block</i> .
	Briefly touch	Confirm selection of the menu item <i>Hot water block</i> .
	Briefly touch	Jump to the setting to start the <i>Hot water block</i> (Time).
	Briefly touch	Increase or lower the setting as required.
	Briefly touch repeatedly	Jump to the other settings until the cursor flashes in the upper corner. Example: <i>Time 1: 06:00-22:00</i> will block domestic hot water preparation from 6:00 am to 10:00 pm.
	Briefly touch	Select the menu item <i>Hot water block (Mo-Su)</i> .
	Briefly touch repeatedly	Jump to the individual weekdays from Monday to Sunday.
	Briefly touch	Select one or both shut-off times per weekday and confirm by pressing the Enter key: N: No shut-off time active T1: Time 1 active as shut-off time T2: Time 2 active as shut-off time Y: Time 1 and Time 2 active as shut-off times
	Briefly touch	Example: <i>SA: N</i> and <i>SU: N</i> will prevent hot water block at weekends.

How to return to the standard screen and what to do if you have any problems making settings:

	Keep pressed for 3 seconds	Jump back to the standard display.
--	----------------------------	------------------------------------